



2001 N Indianwood Ave
Broken Arrow, Oklahoma 74012
Phone: (918) 459-7170
Email: petrolab.service@ametek.com
Web: www.petrolab.com

Reset Instructions

With instrument power **OFF**, Hold down your **STOP & RUN** keys (**Keep them pressed down**), Turn unit power to **ON**.

Wait.....(15-20 seconds) until 3 Pop-up boxes appear. Choose the middle one (Initialize **EEProm**), Hit ENTER.

Go to **SETUP** menu

(Using arrow keys to move you around on the screen and using + (plus) & - (minus) keys to toggle through your selections).

Go to **Unit Press**: Change to PSI or KPA

Go to **Unit Temp**: Change to F or C

Go to **AUTOM.RESOUT** (This prints your results automatically if you prefer. (There are different selections such as Detailed Results (prn Det), or just a simple format (prn), or OFF (Does NOT print automatically until you choose for it to print)), etc.

Go to **Interface** -> then **PRN style**: Select your Printer (Citizen-Printer, Serial Printer, etc).

Exit (STOP Key or End to exit)

Go to **Clock** -> Select your Date format (Form date), Time format (Time Form), and change your date and time, Hit **SET**. (STOP key x 2 or End x 2 to exit).

From the Main Screen

Go to **Measure** - Select your Method (Example – ASTM D6378, ASTM D5191, etc). Hit ENTER.

Select **SET DEF** (Set default method). Hit **ENTER**. Hit **RUN**. When the unit starts the run, you can hit **STOP**. This saves the default method and will make this method your default every time until you change it.

You are now ready to use your VPXpert again.

